



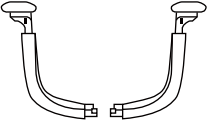






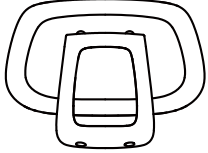


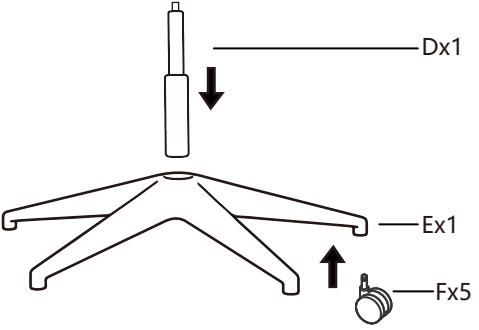


Assembly Instructions

A		1	H	 M8x25	3		
B		1	J		3		
C		1	K		3		
D		1	L	 M8x55	2		
E		1	M	 M8x95	2		
F		5	N		1		
G	 M6	1	O	 M6x20	2		

①




Dx1

Ex1

Fx5

②

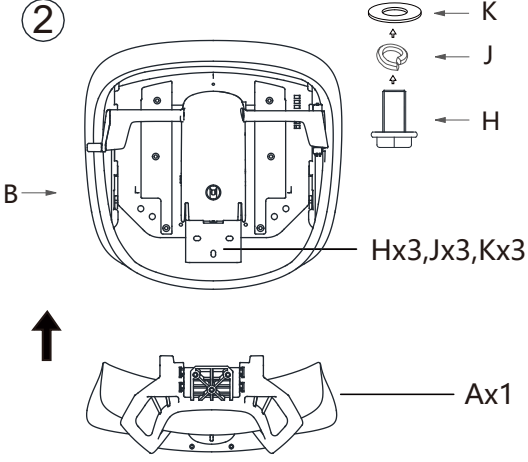

B

Hx3, Jx3, Kx3


Ax1

K

J

H

③ Remove the screws before installing the armrest

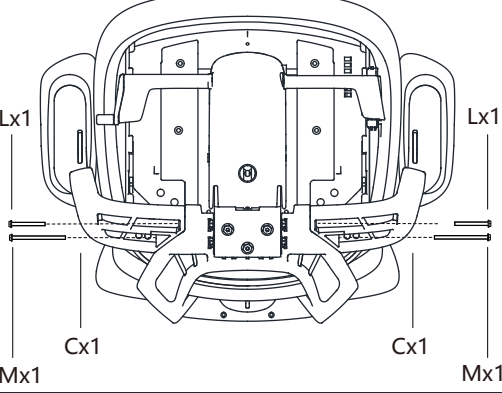


Lx1

Mx1

Cx1

④ Remove the screws before installing the headrest

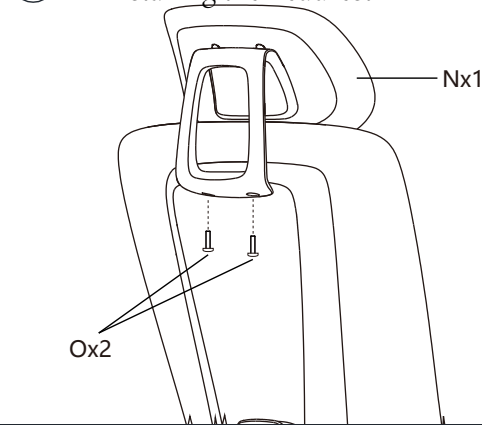

Nx1

Ox2

⑤

